


MODEL 184 LO-BY TRACTOR  
12 VOLT BATTERY IGNITION

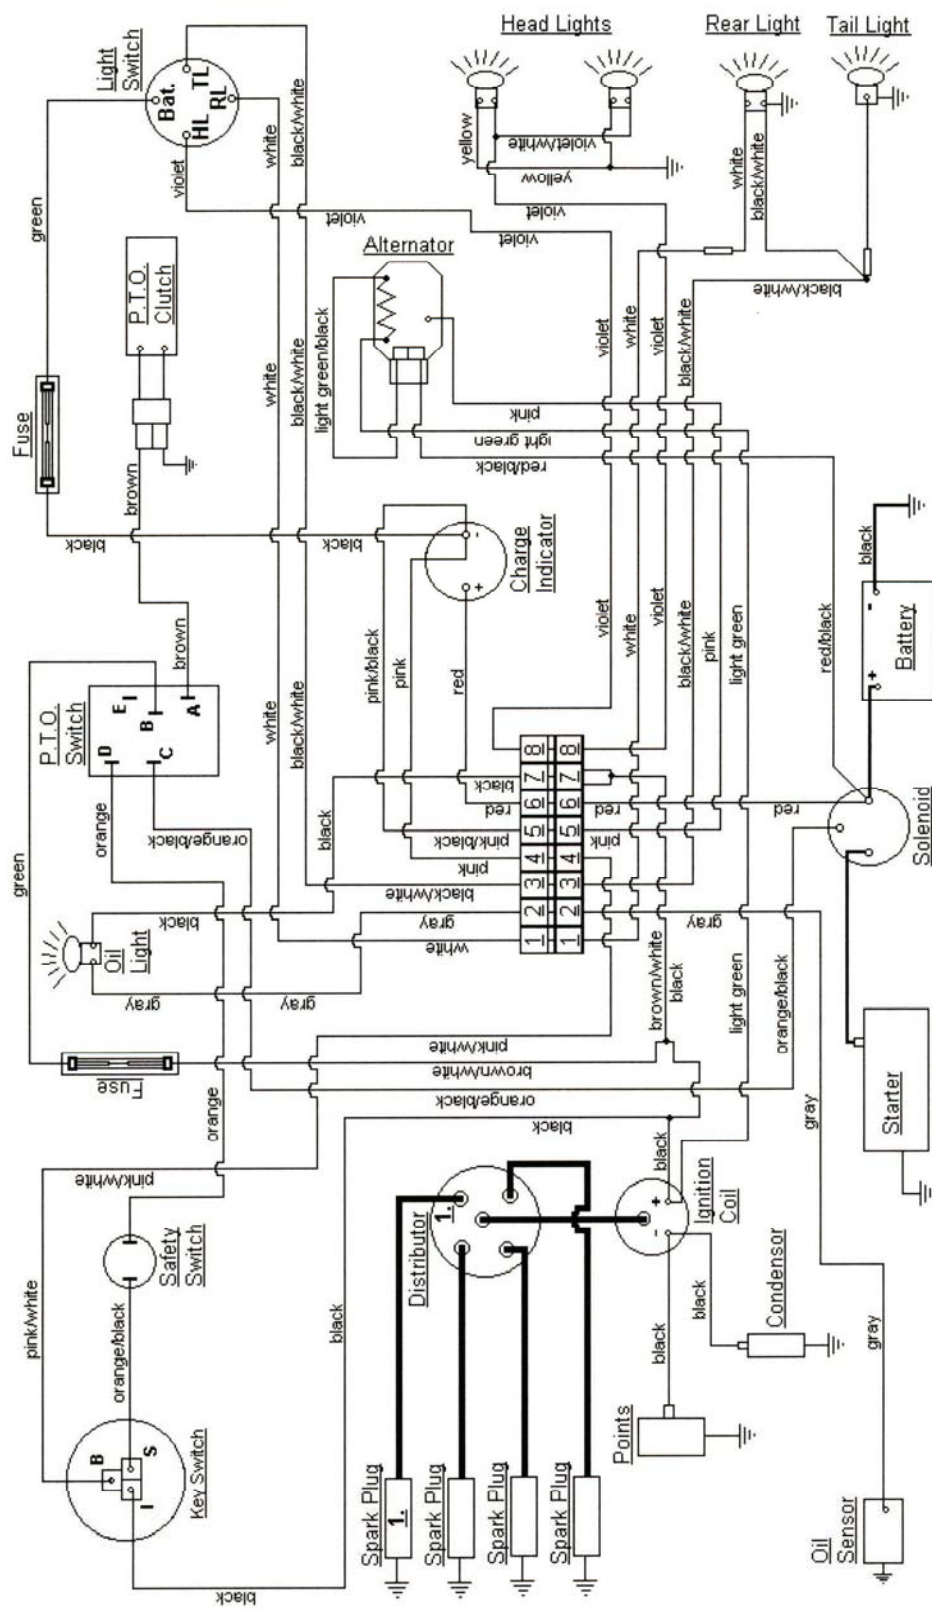

KEY SWITCH

OFF	NONE
RUN	B+I
START	B+I+S